



SAVE THESE INSTRUCTIONS

This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury. If you are unable to understand the contents of this manual, please bring it to the attention of your supervisor. Do not operate this equipment unless you have read and understand the contents of this manual.

- 1.- To avoid possible electric shocks, do not place the cable, plug or appliance in water or in any other liquid. Do not insert screwdrivers or metallic items inside the appliance.
- 2.- DO NOT use any electrical item if the work area is humid or wet or the work is done under the rain. If you use an electrical device with wet hands or stopped in water, you can suffer an electric shock.
- 3.- If the power cable is damaged, it must be replaced by the manufacturer, its service technician, or by someone else authorized by the manufacturer. In the event of handling of appliances by non-authorized people, the guarantee will immediately cease to be valid.
- 4.- Do not allow cables to hang from tables or worktops, nor to come into contact with hot surfaces.
- 5.- Do not use appliances if they are damaged.
- 6.- Switch off appliances before changing accessories or auxiliary parts that move when appliances are in use.
- 7.- Do not leave appliances working unattended. Unplug appliances after each use.
- 8.- Avoid contact with moving parts. Take special care when cleaning appliances.
- 9.- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

10.- Avoid contact with hot parts

11.- Only use this electrical appliance for its designed use, as described in this manual. Do not use parts or accessories without the manufacturer's recommendation.

12.- Use only original spare parts.

13.- This appliance may be used by children of 8 years old and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised or trained on the safe use of the appliance and if they understand the risks involved. Children should not play with the appliance.

14.- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.

15.- Keep the appliance and its cord out of the reach of children under 8 years of age.

16.- This appliance is not intended to be operated by an external timer or remote control system

17.- This text is for users in countries except European countries: This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

18.- The Manufacturer and the Seller are deemed responsible for safety, reliability and performance only if:

A.- The machine is used in compliance to the use instructions

B.- The electrical system of the environment in which the machine is used is compliant to laws in force. DISPOSAL OF ELECTRICAL APPLIANCES:

19.- dispose of this product as unclassified municipal rubbish. Due to the use of electrical and electronic parts, this product must be collected separately, as

ordered in the Spanish Royal Decree 208/2005 on the separate collection of electrical products.

MODEL: 69179
VOLTAGE: 220-240V/50-60Hz
POWER: 6 Kw
MAXIMUM TEMP.: 300°C (572°F)
SURFACE PLATE: 61x40 cm
SIZE: 61,5x51x26 cm
WEIGHT: 37 Kg

Warranty Information

This manual provides the installation, safety and operating instructions for the electric grill. We

recommend all installation, operating and safety instructions appearing in this manual to be read before installation or operation.

Electric grill is a product of extensive research and field testing. The materials used were

selected for maximum durability, attractive appearance and optimum performance. Every unit is thoroughly inspected and tested before shipment.

IMPORTANT!

If the unit changes ownership, be sure this manual accompanies the equipment.

1.- Plug electric grill into a properly grounded electrical outlet of the correct voltage, size, and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size, and install the proper electrical outlet.

2.- To avoid any injury, turn the power switch off, unplug the unit from the power source and allow to cool before performing any maintenance.

3.- For safe and proper operation, the unit must be located at a reasonable distance from combustible walls and materials.

4.- Leave a free space of at least 30 cm (12") for the frontal emptying area to allow correct, safe working.

5.- To prevent any injury or damage do not pull unit by power cord.

CAUTIONS

- 1.- Locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit.
- 2.- Do not place anything on top of the electric grill; doing so could damage electric grill or subject personnel to possible injury.
- 3.- When setting up the unit for operation, make sure power to the unit is off. Failure to do so could result in personal injury.
- 4.- To avoid damage to the unit or injury to personnel never use the electric grill without food.
- 5.- Unit is not weatherproof. For safe and proper operation locate the unit indoors where the ambient air temperature is a minimum of 70°F (21°C) and a maximum of 85°F (29°C).
- 6.- Do not place electric grill in an area that restrict air flow around the front or rear of the unit.
- 7.- Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.