

## **SAVE THESE INSTRUCTIONS**

This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury. If you are unable to understand the contents of this manual, please bring it to the attention of your supervisor. Do not operate this equipment unless you have read and understand the contents of this manual

## **IMPORTANT SAFETY MEASURES**

When using any kind of electrical appliance, some basic safety precautions must always be followed, including the following:

- 1.- To avoid possible electric shocks, do not place the cable, plug or appliance in water or in any other liquid. Do not insert screwdrivers or metallic items inside the appliance.
- 2.- If the power cable is damaged, it must be replaced by the manufacturer, its service technician, or by someone else authorised by the manufacturer. In the event of handling of appliances by non-authorised people, the guarantee will immediately cease to be valid.
- 3.- Do not allow cables to hang from tables or worktops, nor to come into contact with hot surfaces.
- 4.- Do not use appliances if they are damaged.
- 5.- Switch off appliances before changing accessories or auxiliary parts that move when appliances are in use.
- 6.- To disconnect electrical appliances, wait until the engine stops and then unplug the cable from the electric socket.
- 7.- Do not leave appliances working unattended. Ensure that the engine has come to a complete stop before dismantling appliances. Unplug appliances after each use.
- 8.- Avoid contact with moving parts. Take special care when cleaning appliances.
- 9.- Do not allow children to use electrical appliances. Do not leave appliances unattended when in use close to children.
- 10.- Only use this electrical appliance for its designed use, as described in this manual. Do not use parts or accessories without the manufacturer's recommendation.
- 11.- **DISPOSAL OF ELECTRICAL APPLIANCES:** Do not dispose of this product as unclassified municipal rubbish. Due to the use of electrical and electronic parts, this product must be collected separately, as ordered in the Spanish Royal Decree 208/2005 on the separate collection of electrical products.
- 12.- In the event of the machine not being used for an extended period, store it in a dry, well-ventilated place, free from damp.

## SPECIFICATION

<b>MODEL :</b>	<b>69132</b>
<b>VOLTAGE:</b>	230V/50Hz
<b>POWER:</b>	3500W
<b>WEIGHT:</b>	6.8 Kgr
<b>MEASUREMENT:</b>	34x44x13 cms.
<b>POWER LEVELS:</b>	13 (0.5-0.8-1.0-1.3-1.5-1.8-2.0-2.3-2.5-2.7-2.9-3.1-3.5 Kw)
<b>TEMPERATURE LEVELS:</b>	42 (de 35°C a 240°C cada 5° C)

## WORTHY INFORMATION

### Warranty Information

This manual provides the installation, safety and operating instructions for the Electric slicer. We recommend all installation, operating and safety instructions appearing in this manual to be read before installation or operation.

Electric slicer is a product of extensive research and field testing. The materials used were selected for maximum durability, attractive appearance and optimum performance. Every unit is thoroughly inspected and tested before shipment.

**IMPORTANT! Keep these instructions for future reference.**

**If the unit changes ownership, be sure this manual accompanies the equipment.**



### WARNING

- 1.- Plug slicer into a properly grounded electrical outlet of the correct voltage, size, and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size, and install the proper electrical outlet.
- 2.- To avoid any injury, turn the power switch off, unplug the unit from the power source and allow to cool before performing any maintenance.
- 3.- For safe and proper operation, the unit must be located at a reasonable distance from combustible walls and materials.
- 4.- Allow a minimum of 30 cm clearance along the sides to endure proper operation and safety.



### CAUTIONS

- 1.- Locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit.

- 2.- Do not place anything on top of the slicer; doing so could damage slicer or subject personnel to possible injury.
- 3.- When setting up the unit for operation, make sure power to the unit is off. Failure to do so could result in personal injury.
- 4.- Unit is not weatherproof. For safe and proper operation locate the unit indoors where the ambient air temperature is a minimum of 70°F (21°C) and a maximum of 85°F (29°C).
- 5.- Do not locate the slicer in an area subject to excessive temperature or grease from grills, fryers, etc. Excessive temperature could cause damage to the unit.
- 6.- Do not place slicer in an area that restrict air flow around the front or rear of the unit. Do not obstruct the ventilator's air outflow located at the back. Excessive heating may cause irreversible damage to the plaque.
- 7.- Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.

## MAIN FUNCTION

For heating frying pans and other cooking items using an electrical induction system. Only recommended for professional use.

## INSTALLATION

### UNPACKING

- 1.- Open the large box. Remove all packing materials and protective covering from the unit and parts. Do not discard the wrapping until you have checked that the blender is working correctly.

## PARTS LIST



ON/OFF button

TEMP/HEATING

Down button

Up button

TIMER button



## OPERATION

- 1.- Take out the machine and all its accessories and take off the wrapping before you use the electrical appliance. Do not throw away the wrapping until you have checked that the appliance functions properly.
- 2.- Ensure that you place the appliance on a hard, flat surface. Avoid contact with excessively hot areas or other dangerous elements. Check that the connection wire and the power point are in perfect condition.
- 3.- Make sure that there is a space around the appliance of more than 30 cm on each side, especially at the front (the user's area).
- 4.- Before you switch the appliance on for the first time, clean the surface and the frame of the plaque with soapy water and then dry them. Remember that the plaque must not be submerged in water.
- 5.- Connect the plug to the socket according to the values indicated in this manual. The light on the "ON/OFF" button will flash while the plaque is connected.
- 6.- Press the "ON/OFF" button. If you do not place any metal element apt for induction use, the plaque will give out an intermittent BEEPING sound warning you. If after 30 seconds you do not place this element, the plaque will turn off automatically.
- 7.- Once the frying pan or saucepan is placed, it will start to heat up. The initial power will be by default 2,000W (100°C). Press the buttons with arrows to decrease or increase the power (temperature).
- 8.- At any moment when heating or cooking, you can press the "TEMP/HEATING" button which will allow you to alternate between the information shown on the screen in power "W" or in temperature "°C". By default, the value shown is power.
- 9.- When power is selected as the value, the red light next to the word "HEATING" will come on. When control is done through the temperature, the light next to the word "TEMP" will come on.
- 10.- Set the cooking time.
  - a.- Select the desired level of power or temperature by pressing the up and down buttons.
  - b.- Press the button "TIMER".
  - c.- Press the button with the up arrow to set the cooking time up to a maximum of 180 minutes. If you need to, use the down arrow to correct the cooking time.
  - d.- Press the "TIMER" button again to set the time. Once the cooking time is up, the plaque will BEEP 5 times and will then switch off automatically.
- 11.- Once you have finished using the appliance, press the "ON/OFF" button to turn off the plaque. The ventilator will continue to function for a few seconds to prevent heat bags inside the plaque.

## CLEANING

- 1.- Always turn off and unplug the appliance before cleaning it. Wait until it is at room temperature.
  - 2.- Never use any chemical or abrasive products. Do not use a brush or any other type of utensils which could damage the different parts and surface of the slicer.
  - 3.- Use a damp cloth with detergent to clean the machine and then dry it. Make sure to clean the machine completely every day.
  - 4.- ATTENTION: Do not put the machine directly into any container with water in it.
- This machine is not waterproof.

## MAINTENANCE

The induction plaque does not require special maintenance, but the following precautions should be taken:

- a- Do not leave the grinder running unsupervised; the engine overheating may reduce its operating lifespan and/or generate irreparable damage.
- b- Only use original spare parts; the use of parts supplied by other manufacturers may permanently damage the machine.
- c- If you do not use the grinder for long periods of time, we recommend applying a thin layer of oil over the complete surface, even on the stainless steel tray.
- d.- Do not obstruct the ventilator's air outflow located at the back. Excessive heating may cause irreversible damage to the plaque.
- e - Avoid banging on the surface of the plaque, for the glass may crack, especially when it is hot.

## WARNING ON USING FULL POWER

For security reasons the plate has an automatic switch off system in case of overheating, so you should take caution when using full power, according to the following precautionary measures:

- a.- Only use full power for cooking a large amount of food or liquids to be heated.
- b.- Do not use the maximum power for heating small amounts, don't transfer heat to food, the frying pan or saucepan pan used will overheat, transmitting the heat to the induction plate which turns off displaying the E02 error.
- c.- Do not use the plate at full power for longer than 45 minutes, reaching the point of boiling or baking, reduce the power to prevent overheating.
- d.- For security reasons the plate will switch off automatically after 3 hours regardless of power level used.

In case of overheating, turn the plate and allow this to cool before reusing.

## FAILURE DISPLAY AND INSPECTION

If an abnormality comes up, the induction hotplate will enter the protective state automatically and display corresponding protective codes:

### Error Message

- E0**      **Cause:** No cookware or the cookware is not suitable for the induction cooker.  
**Solution:** Put the suitable cookware on the cooking zone.
- E1**      **Cause:** The device becomes too hot (e.g. due to blocked ventilation slots)  
**Solution:** Clear/unblock ventilation slots. Let the device cool off for a few minutes; the device is ready for operation afterwards. Contact the retailer in case the error message remains indicated in the display after the device has cooled off.
- Cause:** Parts are damaged (e.g. transistor)  
**Solution:** Contact retailer.
- E2**      **Cause:** Overheating-protection was activated and the device switched off.  
**Solution:** Remove the cookware from the hob. Let the device cool off for a few minutes. The device is ready for operation afterwards.
- E3**      **Cause:** Temporary overvoltage, device became too hot.  
**Solution:** Let the device cool off for a few minutes. The devices is ready for operation afterwards.

The above are the judgment and inspection of common failures.

Please do not disassemble the unit by yourself to avoid any dangers and damages to the induction hotplate.