

SAVE THESE INSTRUCTIONS

This manual contains important safety information concerning the maintenance, use and operation of this product. Failure to follow the instructions contained in this manual may result in serious injury. If you are unable to understand the contents of this manual, please bring it to the attention of your supervisor. Do not operate this equipment unless you have read and understand the contents of this manual.

IMPORTANT SAFETY MEASURES

When using any kind of electrical appliance, some basic safety precautions must always be followed, including the following:

- 1.- To avoid possible electric shocks, do not place the cable, plug or appliance in water or in any other liquid. Do not insert screwdrivers or metallic items inside the appliance.
- 2.- DO NOT use any electrical item if the work area is humid or wet or the work is done under the rain. If you use an electrical device with wet hands or stopped in water, you can suffer an electric shock.
- 3.- If the power cable is damaged, it must be replaced by the manufacturer, its service technician, or by someone else authorised by the manufacturer. In the event of handling of appliances by non-authorized people, the guarantee will immediately cease to be valid.
- 4.- Do not allow cables to hang from tables or worktops, nor to come into contact with hot surfaces.
- 5.- Do not use appliances if they are damaged.
- 6.- Switch off appliances before changing accessories or auxiliary parts that move when appliances are in use.
- 7.- Do not leave appliances working unattended. Unplug appliances after each use.

- 8.- Avoid contact with moving parts. Take special care when cleaning appliances.
- 9.- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
- 10.- This item is intended for household use only and NOT for professional use
- 11.- Avoid contact with hot parts
- 12.- Only use this electrical appliance for its designed use, as described in this manual. Do not use parts or accessories without the manufacturer's recommendation.
- 13.- Use only original spare parts.
- 14.- This appliance may be used by children of 8 years old and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised or trained on the safe use of the appliance and if they understand the risks involved. Children should not play with the appliance.
- 15.- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- 16.- Keep the appliance and its cord out of the reach of children under 8 years of age.
- 17.- This appliance is not intended to be operated by an external timer or remote control system
- 18.- This text is for users in countries except European countries: This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- 19.- The Manufacturer and the Seller are deemed responsible for safety, reliability and performance only if:
- A.- The machine is used in compliance to the use instructions
 - B.- The electrical system of the environment in which the machine is used is compliant to laws in force.
- 20.- DISPOSAL OF ELECTRICAL APPLIANCES: Do not dispose of this product as unclassified municipal rubbish. Due to the use of electrical and electronic parts, this product must be collected separately, as ordered in the Spanish Royal Decree 208/2005 on the separate collection of electrical products.

SPECIFICATION

MODEL:	69081
VOLTAGE:	220-240V / 50-60 Hz
POWER:	500 W
SPEED:	10.000-12.000 r.p.m
CAPACITY:	1,50 L
SIZES:	18x26x52 cm
WEIGHT:	5,00 Kg



WORTHY INFORMATION

Warranty Information

This manual provides the installation, safety and operating instructions for the blender with glass jug. We recommend all installation, operating and safety instructions appearing in this manual to be read before installation or operation.

The blender with glass jug is a product of extensive research and field testing. The materials used were selected for maximum durability, attractive appearance and optimum performance. Every unit is thoroughly inspected and tested before shipment.

**IMPORTANT! Keep these instructions for future reference.
If the unit changes ownership, be sure this manual accompanies the equipment.**

WARNING

- 2.- Plug the blender with glass jug into a properly grounded electrical outlet of the correct voltage, size, and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size, and install the proper electrical outlet.
- 2.- To avoid any injury, turn the power switch off, unplug the unit from the power source and allow to cool before performing any maintenance.
- 3.- For safe and proper operation, the unit must be located at a reasonable distance from combustible walls and materials.

- 4.- Leave a free space of at least 30 cm (12") for the frontal emptying area to allow correct, safe working.
- 5.- To prevent any injury or damage do not pull unit by power cord.

CAUTIONS

- 1.- Locate the unit at the proper counter height, in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit.
- 2.- Do not place anything on top of the blender with glass jug, doing so could damage slicer or subject personnel to possible injury.
- 3.- When setting up the unit for operation, make sure power to the unit is off. Failure to do so could result in personal injury.
- 4.- Unit is not weatherproof. For safe and proper operation locate the unit indoors where the ambient air temperature is a minimum of 70°F (21°C) and a maximum of 85°F (29°C).
- 5.- Do not locate the blender with glass jug in an area subject to excessive temperature or grease from grills, fryers, etc. Excessive temperature could cause damage to the unit.
- 6.- Do not place blender with glass jug in an area that restrict air flow around the front or rear of the unit.
- 7.- Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.

INSTALLATION


UNPACKING

Open the large box. Remove all packing materials and protective covering from the unit and parts. Do not discard the wrapping until you have checked that the blender is working correctly.

NOTICE

- 1.- The power supplied to this unit must comply with electrical requirements on it's label. Damage or fire may result if the incorrect power is used.
- 2.- Turn off all switches and unplug the unit should an emergency situation occur.
- 3.- Keep hands and other body parts clear of very hot parts. Otherwise injuries may result. Of this device or in the case of a unit being used which has been abused, damaged either accidentally or intentionally, modified, improperly installed or used in any manner contrary to those included in the product instructions, guantee will automatically be canceled.
- 4.- The machine can not be washed or placed into water as it is not a waterproof device. Putting the unit into water may result in electric shock and will damage the mechanical and electrical components.
- 5.- Turn the machine off if it appears to be operating in an unusual manner.
- 6.- Please contact the seller if you lose the operations manual for a replacement.
- 7.- Please contact the seller if you find other problems not covered in the operation manual.

PARTS LIST

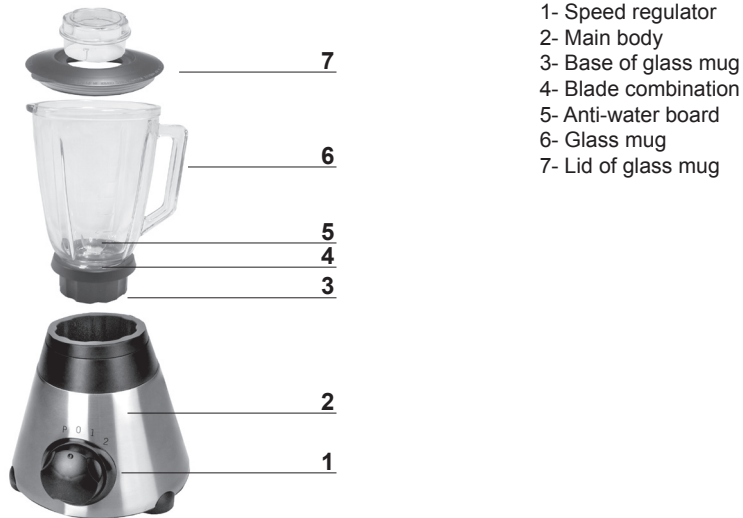

OPERATION

- 1.- Remove the wrapping before using the electrical appliance. Do not discard the wrapping until you have checked that the blender is working correctly.
- 2.- Make sure that the blender is placed on a flat, dry surface. Avoid contact with areas of excessive heat. Check that the connection cable and the power point are in perfect condition.
- 3.- Have fruit or vegetables prepared (for example: cut apple, carrot or other fruit and vegetables cut into pieces), then add water. Do not exceed the maximum line on the blender. If you wish to crush ice, add several ice cubes and water and then cover with the lid.

NOTE: Do not use foods at a temperature above 50°C.

- 4.- Place the glass jar correctly into the main body. If this is not done correctly, the engine will not work as the safety cut-off switch in the main body will not be depressed.
- 5.- NEVER use the jar without the lid. The centrifugal force of the blender will throw liquid out of the jar. This is also a basic safety measure to avoid risks to people.
- 6.- Make sure that the jar is not used when empty, as well as for very long periods of time, as this could affect the useful life of the engine. In the event of the engine overheating, switch it off immediately and wait until it cools down before using it again.
- 7.- Do not insert spoons or other items during use, as this could cause irreparable damage to the knives and the engine.
- 8.- Connect the switch according to the desired use:



Use the P option to blend as you choose; keep the switch on the P position to keep the blender working at maximum speed.



Use the 1 position to blend at low speed especially when crushing ice or hard solid items.



The 2 position allows you to blend all types of soft fruits and liquids at maximum speed.



Ensure the blender is at the 0 position before removing and pouring the contents from the jug.

CLEANING / MAINTENANCE

GENERAL

The blender with glass jug are designed for maximum durability and performance, with minimum maintenance

To avoid any injury, turn the power switch off, unplug the unit from the power source and allow to cool before performing any maintenance.

CAUTION

USE ONLY NON-ABRASIVE CLEANERS. ABRASIVE CLEANERS COULD SCRATCH THE FINISH OF YOUR BLENDER W/GLASS MARRING ITS APPEARANCE AND MAKING IT SUSCEPTIBLE TO SOIL ACCUMULATION.

CLEANING

1.- Once the blender has been used, switch off the engine and disconnect the plug, dismantle the pieces to wash them in water, dry them, and assemble them again.

NOTE: Let the pitcher cool down before washing. Keep the pitcher away from large temperature changes.

2.- The interior knives of the jar cannot be dismantled, meaning that you must take extreme care to avoid cuts to fingers and hands.

3.- The main body cannot be washed in water. Clean it only with a damp cloth.

4.- Make sure that the appliance is stored in a dry, well-ventilated place, free from dampness.